




Toucan Superlite™ System Set-Up Guidelines

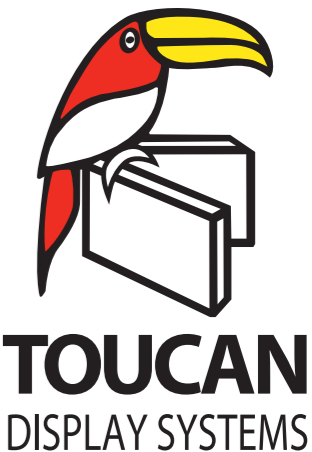

1 Unfold both the base panel and the top panel. The top panel has the joiners already attached.

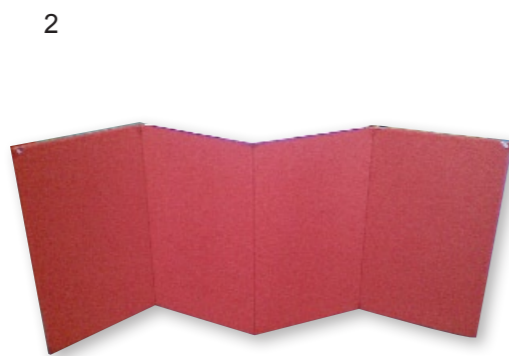

2 Set out the base panel in a zigzag. Allow for the placement of the diamond table top (if required).

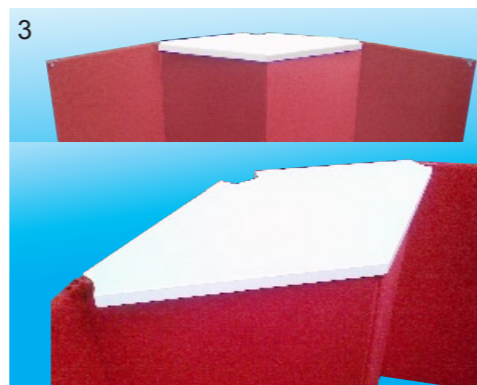


3 Place the diamond top onto the top edge of the base panel. On the inner edge of the Diamond Top are Velcro strips which stick to the panel.




4 Place the supporting pole into the pole support on the bottom of the diamond top. (Back view)




5 Back view with supporting pole in place.

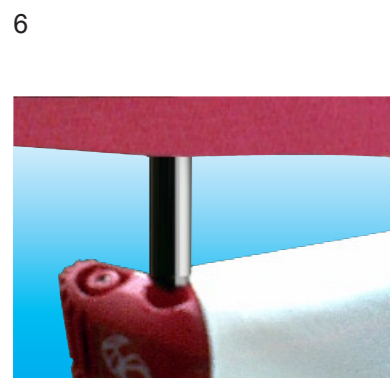


6 Starting from either edge, working your way across the panels, place the joiners into the corresponding slots in the panels.

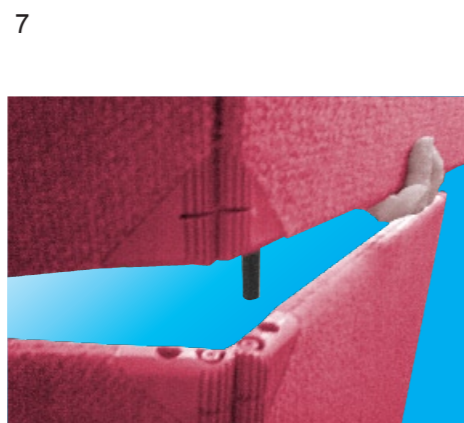


7 ...place the joiners into the corresponding slots in the panels.

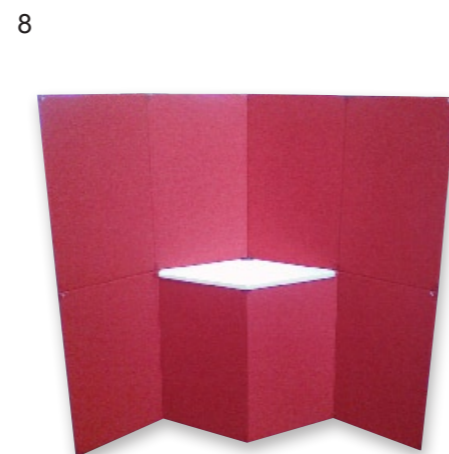

8 Once all joiners are in place the system will be ready to receive fascia.

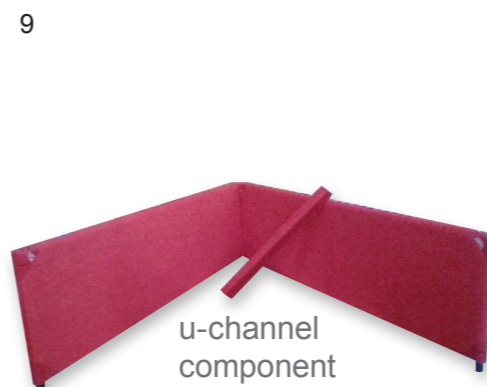

9 Unfold the fascia panels and locate the u-channel component.

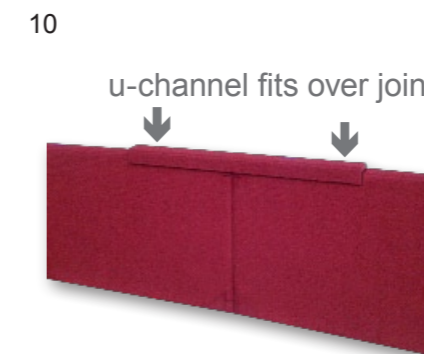


10 Place the u-channel in the centre of the fascia, over the panel join to lock in place.



11 Lift the fascia panel onto the base. (Front view)



12 The fascia is slotted onto the top of the top panel at each end. This is done in the same way the base and top panels fit together.

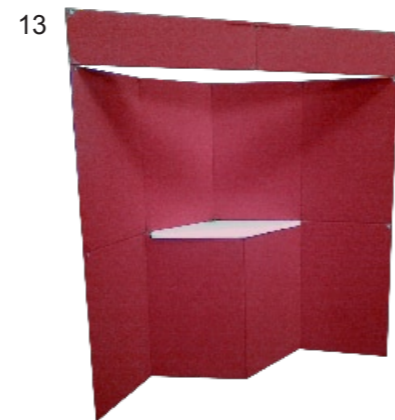

13 Your Superlite System is now ready to receive your graphics.



14 Nylon carry bags with optional castors are available for convenient transportation and safe, secure storage of components.



Order replacement components direct from Toucan

To replace lost or damaged components of your Superlite™ System, please contact your local Toucan Office today.